

# SVENSK STANDARD

## SS-ISO 11171:2018


Fastställt/Approved: 2018-09-13  
Utgåva/Edition: 2  
Språk/Language: engelska/English  
ICS: 23.100.60; 75.120



---

**Hydraulik – Kalibrering av automatiska partikelräknare för vätskor (ISO 11171:2016, IDT)**

**Hydraulic fluid power – Calibration of automatic particle counters for liquids (ISO 11171:2016, IDT)**



# Standarder får världen att fungera

*SIS (Swedish Standards Institute) är en fristående ideell förening med medlemmar från både privat och offentlig sektor. Vi är en del av det europeiska och globala nätverk som utarbetar internationella standarder. Standarder är dokumenterad kunskap utvecklad av framstående aktörer inom industri, näringsliv och samhälle och befrämjar handel över gränser, bidrar till att processer och produkter blir säkrare samt effektiviserar din verksamhet.*

## Delta och påverka

Som medlem i SIS har du möjlighet att påverka framtida standarder inom ditt område på nationell, europeisk och global nivå. Du får samtidigt tillgång till tidig information om utvecklingen inom din bransch.

## Ta del av det färdiga arbetet

Vi erbjuder våra kunder allt som rör standarder och deras tillämpning. Hos oss kan du köpa alla publikationer du behöver – allt från enskilda standarder, tekniska rapporter och standardpaket till handböcker och onlinetjänster. Genom vår webbtjänst e-nav får du tillgång till ett lättnavigerat bibliotek där alla standarder som är aktuella för ditt företag finns tillgängliga. Standarder och handböcker är källor till kunskap. Vi säljer dem.

## Utveckla din kompetens och lyckas bättre i ditt arbete

Hos SIS kan du gå öppna eller företagsinterna utbildningar kring innehåll och tillämpning av standarder. Genom vår närhet till den internationella utvecklingen och ISO får du rätt kunskap i rätt tid, direkt från källan. Med vår kunskap om standarders möjligheter hjälper vi våra kunder att skapa verklig nytta och lönsamhet i sina verksamheter.

**Vill du veta mer om SIS eller hur standarder kan effektivisera din verksamhet är du välkommen in på [www.sis.se](http://www.sis.se) eller ta kontakt med oss på tel 08-555 523 00.**



# Standards make the world go round

*SIS (Swedish Standards Institute) is an independent non-profit organisation with members from both the private and public sectors. We are part of the European and global network that draws up international standards. Standards consist of documented knowledge developed by prominent actors within the industry, business world and society. They promote cross-border trade, they help to make processes and products safer and they streamline your organisation.*

## Take part and have influence

As a member of SIS you will have the possibility to participate in standardization activities on national, European and global level. The membership in SIS will give you the opportunity to influence future standards and gain access to early stage information about developments within your field.


## Get to know the finished work

We offer our customers everything in connection with standards and their application. You can purchase all the publications you need from us - everything from individual standards, technical reports and standard packages through to manuals and online services. Our web service e-nav gives you access to an easy-to-navigate library where all standards that are relevant to your company are available. Standards and manuals are sources of knowledge. We sell them.

## Increase understanding and improve perception

With SIS you can undergo either shared or in-house training in the content and application of standards. Thanks to our proximity to international development and ISO you receive the right knowledge at the right time, direct from the source. With our knowledge about the potential of standards, we assist our customers in creating tangible benefit and profitability in their organisations.

**If you want to know more about SIS, or how standards can streamline your organisation, please visit [www.sis.se](http://www.sis.se) or contact us on phone +46 (0)8-555 523 00**

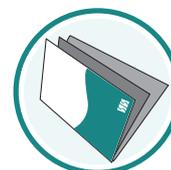

Den internationella standarden ISO 11171:2016 gäller som svensk standard. Detta dokument innehåller den officiella engelska versionen av ISO 11171:2016.

Denna standard ersätter SS-ISO 11171, utgåva 1

The International Standard ISO 11171:2016 has the status of a Swedish Standard. This document contains the official English version of ISO 11171:2016.

This standard supersedes the SS-ISO 11171, edition 1

© Copyright/Upphovsrätten till denna produkt tillhör SIS, Swedish Standards Institute, Stockholm, Sverige. Användningen av denna produkt regleras av slutanvändarlicensen som återfinns i denna produkt, se standardens sista sidor.

© Copyright SIS, Swedish Standards Institute, Stockholm, Sweden. All rights reserved. The use of this product is governed by the end-user licence for this product. You will find the licence in the end of this document.

*Upplysningar om sakinnehållet i standarden lämnas av SIS, Swedish Standards Institute, telefon 08-555 520 00. Standarder kan beställas hos SIS som även lämnar allmänna upplysningar om svensk och utländsk standard.*

*Information about the content of the standard is available from the Swedish Standards Institute (SIS), telephone +46 8 555 520 00. Standards may be ordered from SIS, who can also provide general information about Swedish and foreign standards.*

Denna standard är framtagen av kommittén för Renhetsteknik, SIS/TK 108.

Har du synpunkter på innehållet i den här standarden, vill du delta i ett kommande revideringsarbete eller vara med och ta fram andra standarder inom området? Gå in på [www.sis.se](http://www.sis.se) - där hittar du mer information.

# Contents

Page

<b>Foreword</b> .....	<b>v</b>
<b>Introduction</b> .....	<b>vi</b>
<b>1 Scope</b> .....	<b>1</b>
<b>2 Normative references</b> .....	<b>1</b>
<b>3 Terms and definitions</b> .....	<b>1</b>
<b>4 Materials and equipment</b> .....	<b>2</b>
<b>5 Sequence of APC calibration procedures</b> .....	<b>4</b>
<b>6 Sizing calibration procedure</b> .....	<b>7</b>
<b>7 Data presentation</b> .....	<b>14</b>
<b>8 Identification statement</b> .....	<b>14</b>
<b>Annex A (normative) Preliminary APC check</b> .....	<b>15</b>
<b>Annex B (normative) Coincidence error procedure</b> .....	<b>18</b>
<b>Annex C (normative) Flow rate limit determination</b> .....	<b>23</b>
<b>Annex D (normative) Resolution determination</b> .....	<b>27</b>
<b>Annex E (normative) Verification of particle-counting accuracy</b> .....	<b>32</b>
<b>Annex F (normative) Preparation and verification of bottles of secondary calibration suspensions</b> .....	<b>35</b>
<b>Annex G (informative) APC calibration round robin</b> .....	<b>38</b>
<b>Annex H (informative) Sample calculations</b> .....	<b>43</b>
<b>Annex I (informative) Verification of particle size distribution of calibration samples</b> .....	<b>49</b>
<b>Bibliography</b> .....	<b>51</b>

## Foreword

ISO (the International Organization for Standardization) is a worldwide federation of national standards bodies (ISO member bodies). The work of preparing International Standards is normally carried out through ISO technical committees. Each member body interested in a subject for which a technical committee has been established has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work. ISO collaborates closely with the International Electrotechnical Commission (IEC) on all matters of electrotechnical standardization.

The procedures used to develop this document and those intended for its further maintenance are described in the ISO/IEC Directives, Part 1. In particular the different approval criteria needed for the different types of ISO documents should be noted. This document was drafted in accordance with the editorial rules of the ISO/IEC Directives, Part 2 (see [www.iso.org/directives](http://www.iso.org/directives)).

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. ISO shall not be held responsible for identifying any or all such patent rights. Details of any patent rights identified during the development of the document will be in the Introduction and/or on the ISO list of patent declarations received (see [www.iso.org/patents](http://www.iso.org/patents)).

Any trade name used in this document is information given for the convenience of users and does not constitute an endorsement.

For an explanation on the meaning of ISO specific terms and expressions related to conformity assessment, as well as information about ISO's adherence to the World Trade Organization (WTO) principles in the Technical Barriers to Trade (TBT) see the following URL: [www.iso.org/iso/foreword.html](http://www.iso.org/iso/foreword.html).

The committee responsible for this document is ISO/TC 131, *Fluid power systems*, Subcommittee SC 6, *Contamination control*.

This third edition cancels and replaces the second edition (ISO 11171:2010), of which it constitutes a minor revision.

This edition includes the following significant changes with respect to the previous edition:

- 6.8: defining  $\mu\text{m}$  equation, Table 3 – revised to show  $\mu\text{m}(\text{b})$  and  $\mu\text{m}(\text{c})$  to be reported;
- 7.1: revised to show how to report  $\mu\text{m}(\text{b})$  and  $\mu\text{m}(\text{c})$ .

## Introduction

In hydraulic fluid power systems, power is transmitted and controlled through a liquid under pressure within an enclosed circuit. The fluid is both a lubricant and a power-transmitting medium. Reliable system performance requires control of the contaminants in the fluid. Qualitative and quantitative determination of the particulate contaminants in the fluid medium requires precision in obtaining the sample and in determining the contaminant particle size distribution and concentration. Liquid automatic particle counters (APCs) are an accepted means of determining the concentration and size distribution of the contaminant particles. Individual APC accuracy is established through calibration.

This International Standard establishes a recommended standard calibration procedure for determining particle sizing and counting accuracy. The primary particle-sizing calibration is conducted using NIST SRM 2806 suspensions with particle size distribution certified by the United States' National Institute of Standards and Technology (NIST). A secondary calibration method with traceability to NIST uses suspensions of ISO MTD which are independently analysed using an APC calibrated by the primary method. Concentration limits are determined through the use of serial dilutions of a concentrated suspension. Operation and performance limits are also established using this International Standard.

# Hydraulic fluid power — Calibration of automatic particle counters for liquids

## 1 Scope

This International Standard specifies procedures for the following:

- a) primary particle-sizing calibration, sensor resolution and counting performance of automatic particle counters (APCs) for liquids capable of analysing bottle samples;
- b) secondary particle-sizing calibration using suspensions verified with a primary calibrated APC;
- c) establishing acceptable operation and performance limits;
- d) verifying particle sensor performance using a truncated test dust;
- e) determining coincidence and flow rate limits.

## 2 Normative references

The following documents, in whole or in part, are normatively referenced in this document and are indispensable for its application. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

ISO 3722, *Hydraulic fluid power — Fluid sample containers — Qualifying and controlling cleaning methods*

ISO 5598, *Fluid power systems and components — Vocabulary*

ISO 12103-1, *Road vehicles — Test dust for filter evaluation — Part 1: Arizona test dust*

ISO 16889, *Hydraulic fluid power — Filters — Multi-pass method for evaluating filtration performance of a filter element*

## 3 Terms and definitions

For the purposes of this document, the terms and definitions given in ISO 5598 and the following apply.

### 3.1

#### **automatic particle counter**

#### **APC**

instrument that automatically counts and sizes individual particles suspended in a fluid, typically relying on optical light scattering or light extinction principles of particle sizing

Note 1 to entry: An APC consists of, at a minimum, a particle sensor, a means for delivering a known volume of sample to the sensor at a controlled rate, a signal processor, an analyser that compiles the sensor output for the sizes of individual particles into particle size distribution and a means for outputting particle size distribution results for the sample.

### 3.2

#### **threshold noise level**

minimum voltage setting of an automatic particle counter at which the observed pulse-counting frequency does not exceed 60 counts/min due to electrical noise in the absence of flow in the sensing volume

### 3.3

#### **sensing volume**

portion of the illuminated region of the sensor through which the fluid stream passes and from which the light is collected by the optical system

## SS-ISO 11171:2018 (E)

**3.4  
resolution**

measure of the ability of an automatic particle counter to distinguish between particles of similar, but different, sizes

**3.5  
coincidence error limit**

highest concentration of NIST RM 8632 that can be counted with an automatic particle counter with an error of less than 5 % resulting from the presence of more than one particle in the sensing volume at one time

**3.6  
working flow rate**

flow rate through the sensor used for sizing calibration and sample analysis

**3.7  
particle size**

projected area equivalent diameter of particles as determined using scanning electron microscopy or as determined using a calibrated liquid optical single particle automatic particle counter

Note 1 to entry: Unless otherwise stated, an APC used for particle size determination is calibrated in accordance with this International Standard.

Note 2 to entry: NIST uses scanning electron microscopy to determine the projected area equivalent diameter of particles in its reference materials.

**3.8  
particle size distribution**

number concentration of particles, expressed as a function of particle size

**3.9  
primary calibration**

sizing calibration conducted using NIST standard reference material 2806x

Note 1 to entry: The procedure is specified in [Clause 6](#).

Note 2 to entry: For details of NIST standard reference material 2806x, see [4.4](#).

**3.10  
secondary calibration**

sizing calibration conducted using calibration suspensions

Note 1 to entry: The procedure is specified in [Clause 6](#) and the calibration suspensions are prepared in accordance with [Annex F](#).

**4 Materials and equipment**

**4.1 Polystyrene latex spheres**, nearly monodispersed in aqueous suspension. Polystyrene latex spheres with a nominal diameter of 10 µm are required in [Annex D](#) for resolution determination and polystyrene latex spheres with other nominal diameters larger than 50 µm are required in [Clause 6](#), if size calibration for particle sizes of 50 µm and larger is performed. In certain situations, it may also be useful to use additional sphere sizes. Regardless, the coefficient of variation of each polystyrene latex sphere size shall be less than 5 %. The supplier of the polystyrene latex spheres shall provide a certificate

of analysis with each batch, which indicates that the sphere particle size has been determined using techniques with traceability to National or International Standards.

Once opened, suspensions of polystyrene latex spheres shall be used within three months unless the size distribution and cleanliness of the suspension have been verified.

NOTE 1 The size distribution and cleanliness of polystyrene latex spheres can be verified using the method described in [D.13](#).

NOTE 2 Polystyrene latex spheres in aqueous suspension have a limited shelf-life. Shelf-life is a function of a variety of factors including temperature and microbial contamination of the suspension.

**4.2 Clean dilution fluid**, consisting of the test fluid used in ISO 16889 and an antistatic additive that gives a conductivity of  $2\,500\text{ pS/m} \pm 1\,000\text{ pS/m}$  at room temperature. The fluid shall contain less than 0,5 % of the number of particles equal to or larger than the smallest particle size of interest expected to be observed in the samples.

**4.3 Clean aerosol OT dilution fluid**, to determine sensor resolution in [Annex D](#) (the clean dilution fluid specified in [4.2](#) is used for all other operations in this International Standard). It is prepared from a concentrate made by adding 120 g of aerosol OT to each litre of clean dilution fluid ([4.2](#)). Heat the concentrate to about 60 °C and stir until the aerosol OT has completely dissolved. Prepare the aerosol OT dilution fluid by diluting the concentrate with clean dilution fluid ([4.2](#)) to a final concentration of 12 g of aerosol OT per litre. The clean aerosol OT dilution fluid shall meet the same cleanliness levels as the dilution fluid specified in [4.2](#).

**CAUTION — Follow the precautions for safe handling and usage described in the materials safety data sheet (available from the supplier of the aerosol OT).**

Aerosol OT (dioctyl sulfosuccinate, sodium salt) is a waxy, hygroscopic solid. If it appears to be damp or has absorbed water prior to use, dry it first for at least 18 h at about 150 °C.

**4.4 NIST standard reference material 2806<sub>x</sub> (SRM 2806<sub>x</sub>) primary calibration suspension**, where *x* is the letter used by NIST to designate the batch number of the certified primary calibration suspension, available from NIST. Primary calibrations shall use SRM 2806.

NOTE ISO/TR 16144 describes the procedures used to certify the standard reference material SRM 2806.

**4.5 NIST reference material 8631 (RM 8631) dust**, prepared by drying the dust for at least 18 h at a temperature between 110 °C and 150 °C, required if secondary calibration is to be performed (see [6.1](#)).

**4.6 ISO medium test dust (MTD) in accordance with ISO 12103-1**, dried for at least 18 h at a temperature between 110 °C and 150 °C before use.

**4.7 NIST reference material 8632 (RM 8632) dust**, prepared by drying the dust for at least 18 h at a temperature between 110 °C and 150 °C before use, if required for determination of coincidence error limit or in [Annexes B, C](#) and [E](#).

NOTE The reference materials specified in [4.4](#), [4.5](#), [4.6](#) and [4.7](#) are created using “living” documents that may change as new batches are produced. Users of this International Standard are advised to ensure that they are using the latest batch available.

**4.8 Automatic particle counter (APC) for liquids**, with bottle sampler.

**4.9 Clean sample containers**, with closures (appropriate bottle caps, for example), and **volumetric glassware** of at least class B. The cleanliness levels of the sample containers, closures and glassware shall be less than 0,5 % of the number of particles (larger than the smallest particle size of interest) expected to be observed in the samples. The cleanliness levels shall be confirmed by ISO 3722.

## SS-ISO 11171:2018 (E)

**4.10 Mechanical shaker**, such as a paint or laboratory shaker, suitable for dispersing suspensions.

**4.11 Ultrasonic cleaner**, with a power density of 3 000 W/m<sup>2</sup> to 10 000 W/m<sup>2</sup> of bottom area.

**4.12 Linear-linear graph paper or computer software** for generating graphics.

**4.13 Log-log graph paper or computer software** for generating graphics.

**4.14 Analytical or electronic balance** with the following minimum specifications:

- a) readability: 0,05 mg;
- b) accuracy (agreement with true mass): ±0,05 mg;
- c) precision (repeatability): ±0,05 mg;
- d) front or side doors and a covered top to eliminate the effect of air currents.

## 5 Sequence of APC calibration procedures

**5.1** See [Figure 1](#) for a recommended sequence of steps to be followed when performing a full calibration on a new APC. Conduct the procedures of this clause when a new APC is received or following the repair or readjustment of an APC or sensor (see [Table 1](#)). Proceed to [Clause 6](#) if neither the APC nor the sensor has been repaired or readjusted, if no detectable change in the operating characteristics has occurred since the last sizing calibration was performed, or if the APC has been subjected to the procedures in [Annexes A, B, C, D, and E](#) and the results have been documented. The specific order of Annexes and Clauses specified in [Figure 1](#) and [Table 1](#) are recommendations. The operator may follow a different order, as long as all required parts are performed.

NOTE 1 [Annexes A, B, C, and D](#) can be performed by an individual laboratory or by the manufacturer of the APC prior to delivery.

A change in the operating characteristics of the APC can be detected by several different methods, including but not limited to the following:

- a) using particle data from control samples collected over time and a statistical process control chart, such as an individuals moving range (IMR) chart, to detect significant changes in calibration;
- b) comparing calibration curves over time to detect a significant change in calibration;
- c) returning the APC to its manufacturer for evaluation and assessment of the change in calibration;
- d) analysing a primary or secondary calibration suspension in accordance with [6.2](#) and [6.3](#), then comparing the resulting particle concentration data to the corresponding particle size distribution for the sample. If the results agree within the limits for the maximum allowable  $D_Q$  given in [Table C.2](#), the ability of the APC to size and count particles has not been significantly affected. If the results do not agree, a significant change has occurred and the operator is instructed to proceed as indicated in [Table 1](#);
- e) analysing a primary or secondary calibration suspension and resulting data as described in item d), then analysing an ISO UFTD sample prepared in accordance with [Annex A](#), then comparing the resulting particle concentration data with the limits given in [Table A.1](#). If the results agree within the limits given in [Table A.1](#), the ability of the APC to size and count particles has not been significantly affected. If the results do not agree with the limits of [Table A.1](#), the APC has experienced a significant change and the operator is instructed to proceed as indicated in [Table 1](#).

NOTE 2 For the purposes of this subclause, repair or readjustment of an APC refers to service or repair procedures that affect the ability of the APC to accurately size and count particles.

If the light source or any part of the optics is adjusted, repaired or replaced, the procedures of [Clause 6](#) and [Annexes A, B, D, and E](#) shall be repeated.

If the sensor or counting electronics is adjusted, repaired or replaced, the procedures of [Clause 6](#) and [Annexes A, B, C, D, and E](#) shall be repeated.

If the volume measurement system is repaired, replaced or readjusted, the procedures of [Annex A](#) shall be repeated.

It is not necessary to repeat these procedures following normal cleaning procedures, the attachment of cables or peripheral equipment, the replacement of plumbing lines or connections, or following other operations that do not involve disassembly of the APC, sensor or volume measurement system.

**5.2** Perform the preliminary APC check, which includes volume accuracy, in accordance with [Annex A](#).

**5.3** Determine the coincidence error limits of the APC in accordance with [Annex B](#).

**5.4** Perform the sizing calibration procedure in accordance with [Clause 6](#).

**5.5** Determine the flow rate limits of the APC in accordance with [Annex C](#).

**5.6** Determine the APC resolution in accordance with [Annex D](#).

**5.7** Verify the particle-counting accuracy in accordance with [Annex E](#).

**5.8** In order to conform to the requirements of this International Standard, the APC shall include the following:

- a) be calibrated in accordance with [5.4](#);
- b) meet the volume accuracy, resolution and sensor performance specifications determined in [5.2](#), [5.6](#) and [5.7](#);
- c) be operated using the calibration curve determined in [5.4](#) within the coincidence error and flow rate limits determined in [5.3](#) and [5.5](#).